

WEIGHT—Model "C-1" 265 pounds.
 Model "C-2" 330 pounds.
 Model "C-3" 340 pounds.

Universal
 MOTOR CO.
 OSHKOSH WIS.

FIGURE 12

PART THREE

SPECIAL INSTRUCTIONS ON THE FLEXIFOUR ENGINE

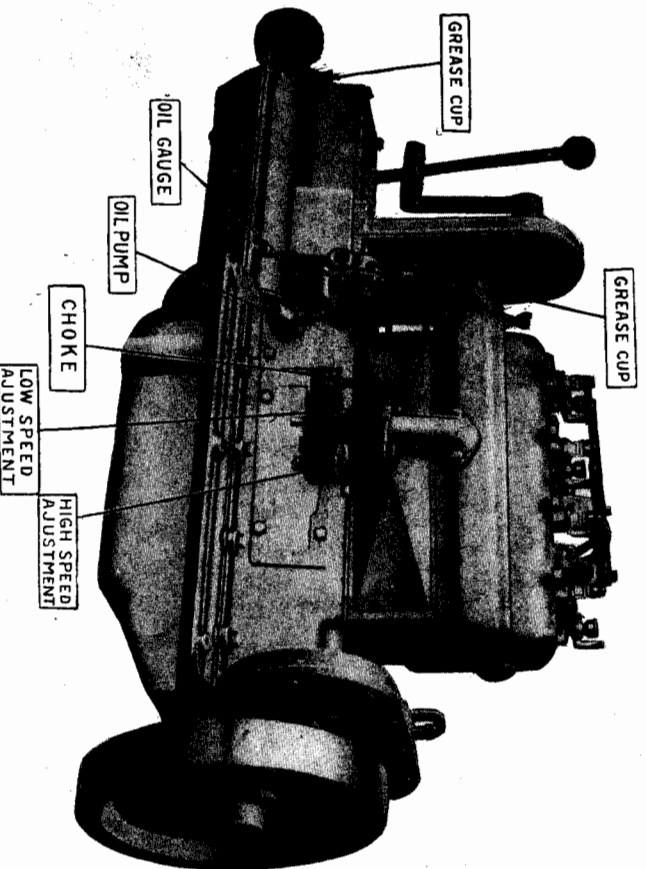


FIGURE 6

45—Filled with a good grade of medium oil until oil level indicator shows full. Do not overfill as it will cause smoking and carbon. Filler pipe is located at side of engine opposite the carburetor.

(See special Lubrication Instruction Book supplied by
Universal Motor Company)

46—To start engine see instructions 19 to 24 inclusive.

OILING SYSTEM

47—The oiling system is of the splash type. As soon as engine is started, see that the oil pressure gauge shows that oil is flowing. Do not run engine longer than one minute without oil pressure gauge showing that the oil pump is working. Pressure gauge will show from 1 to about 3 on the dial.

(For detail instructions covering the oiling system and oil pump on the Flexifour, see Special Lubrication Book.)